



...also Manufactures:

LongLiner  
Series 4000



- Water Level Meters (with Well Profiling Accessories)
- Borehole Inspection Cameras
- Groundwater Data Loggers
- Oil/Water Interface Meters
- Conductivity/Temperature Meters
- Tag Lines

#### Warranty Information:

**Reel:** See reel manufacturer's website for warranty information.

**Tape/Probe/Panel:** See Water Level Meter Instructions Manual

#### Contact Information:

##### Heron Instruments Inc.

447 Moxley Road, Dundas, ON L9H 5E2 CANADA  
905-628-4999 | 1-800-331-2032  
[www.heroninstruments.com](http://www.heroninstruments.com) | [info@heroninstruments.com](mailto:info@heroninstruments.com)

#### Quick Start Guide & Instruction




[www.heroninstruments.com](http://www.heroninstruments.com)

## Introduction

The motorized reel requires 12 Volt direct current power supply capable of delivering 20 Amps of current. A typical example would be a standard car battery. The LongLiner is protected with an automotive 20Amp fuse.

## Quick Start

Before connecting the alligator clips from reel to a power supply, ensure the control switch is in the middle (OFF) position. Connect the red clip to the Positive terminal (+) and the black clip to the Negative terminal (-).

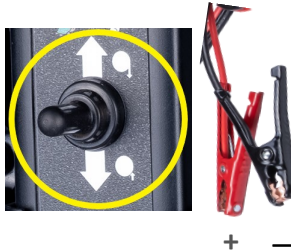

## Warning

**Disengage the reel brake before operating the reel. Failure to do so can cause the fuse to blow and/or damage the reel.**

Keep away from moving components. Should not be operated by anyone who does not have proper training relevant to the operation of motorized equipment. Do not use a winch. 2 person operation recommended.



## Operation Instructions

To **lower the probe**, push the switch to the Forward position.



To **raise the probe**, push the switch to the Back position.



When the switch is released it will return to the OFF position.



**Speed Control Knob** - Clockwise is faster